


MTP136D QUICK GUIDE

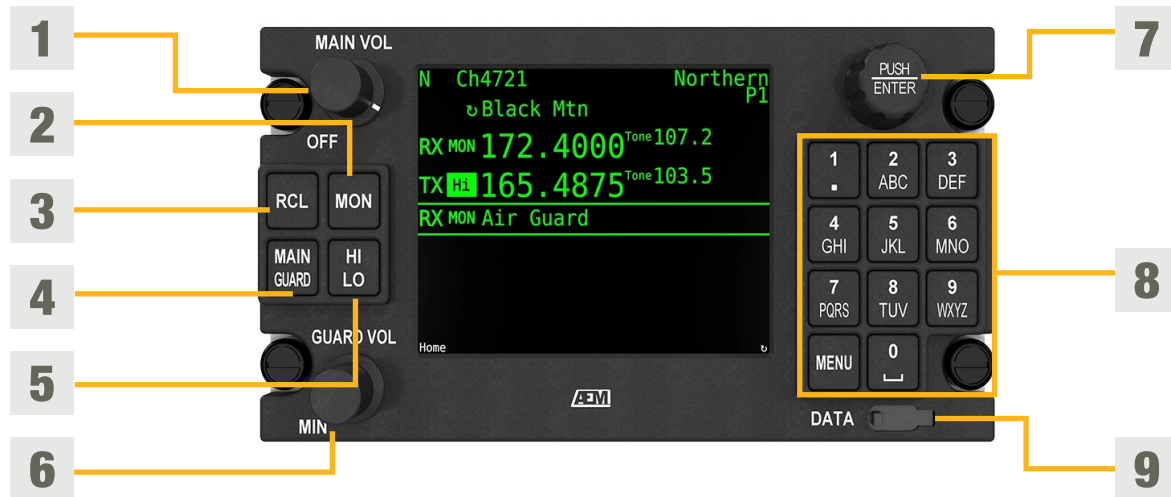

ITEM	NAME	DESCRIPTION
1	Main Volume Knob (MAIN VOL)	Adjusts the volume of the main radio. Detent turns the MTP OFF.
2	Monitor (MON)	Bypasses Squelch Threshold and Channel Signaling allowing all transmissions to be heard.
3	Channel Recall (RCL)	Returns to the previous channel.
4	Radio Recall (MAIN GUARD)	Switch between MAIN and GUARD for transmit and edit.
5	Transmit Power (HI LO)	Changes transmit power.
6	Guard Volume Knob (GUARD VOL)	Adjusts the volume of the guard radio.
7	Rotary Selector (PUSH ENTER)	Changes channel, navigates, and modifies options.
8	Keypad and MENU	Shows/hides the Menu. Changes channel, navigates, and modifies options.
9	Data Port (DATA)	USB Type-C port used for Profile Import/Export, Error Log Export, and Firmware Updates.

Firmware Revision 1.03

FUNCTION	KEYS
Edit RX Frequency	MENU, 3 DEF EDIT, 3 DEF RX Freq, PUSH ENTER
Edit TX Frequency	MENU, 3 DEF EDIT, 4 GHI TX Freq, PUSH ENTER
Edit RX Tone	MENU, 3 DEF EDIT, 5 JKL RX Tone, PUSH ENTER (Select CTCSS TONE, DCS CODE or NONE (--)), PUSH ENTER (Rotate to or type in desired TONE/ CODE), PUSH ENTER
Edit TX Tone	MENU, 3 DEF EDIT, 6 MNO TX Tone, PUSH ENTER (Select CTCSS TONE, DCS CODE or NONE (--)), PUSH ENTER (Rotate to or type in desired TONE/ CODE), PUSH ENTER
Change Zone	MENU, 4 GHI, PUSH ENTER (Rotate to Zone), PUSH ENTER, PUSH ENTER
Return Home	MAIN GUARD, Or push your PTT

Contact Technical Support:
1-888-763-1088 ext. 2 or support@aem-corp.com

- Unique Software Key
- Agile Edit Quick Guide
- Pre-Made Channel Lists
- Programming Assistance

AEM Radio Profile Editor:
<https://software.aem-corp.com/mtp13xx/editor>

#100-966 Crowley Ave Kelowna,
British Columbia, Canada V1Y 0L1

aem-corp.com/radio