




Installation Manual

AEM Progressive Web Applications

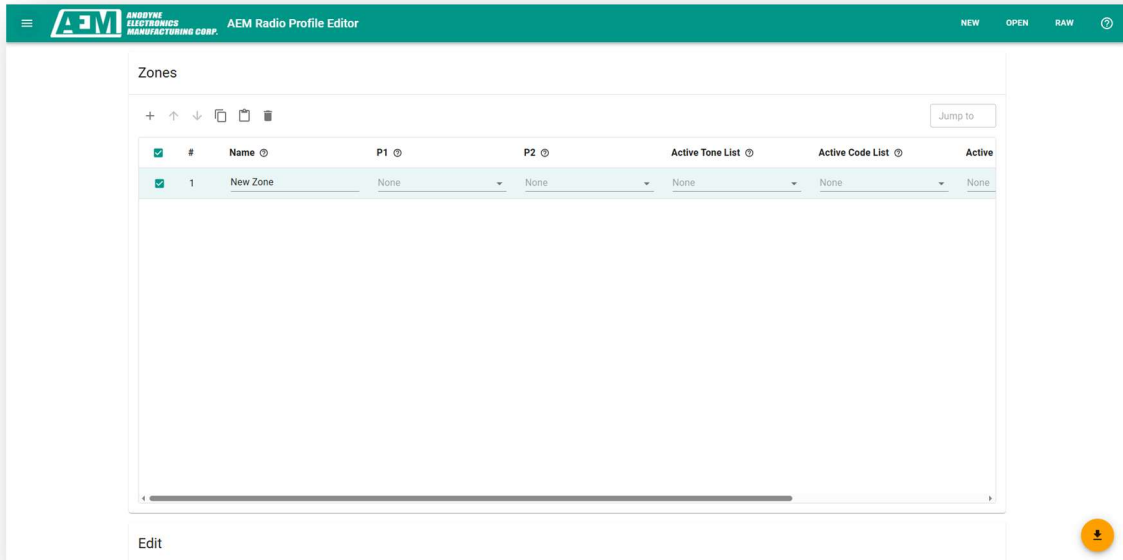

INSTALLATION MANUAL

AEM Progressive Web Applications
REV 1.00
July 11, 2025

Anodyne Electronics Manufacturing Corp.
966 Crowley Ave Unit #100
Kelowna, BC, Canada.
V1Y 0L1

Telephone: +1-250-763-1088
Toll Free: +1-888-763-1088

Website: www.aem-corp.com

© 2025 Anodyne Electronics Manufacturing Corp. (AEM)

All Rights Reserved**COPYRIGHT STATEMENT**

© 2025 Anodyne Electronics Manufacturing Corp. (AEM), All Rights Reserved

This publication is the property of AEM and is protected by Canadian copyright laws.
No part of this document may be reproduced or transmitted in any form or by any means
including electronic, mechanical, photocopying, recording, or otherwise, without the prior written
permission of AEM

Prepared By:	Checked By:	Approved By:

AEM MANUAL REVISIONS			
§	Rev. #	Revision Description	Date
All	1.00	Initial release	11-Jul-2025

Section 1.0 Introduction

AEM is delivering some of their new tools as Progressive Web Applications (PWAs). A PWA is an app that's built using web platform technologies, but that provides a user experience like that of a platform-specific app. This allows AEM's web tools to be installable and work offline. To install an AEM PWA, follow the instructions below.

Section 2.0 Installation

Installation of PWAs is similar on most browsers and platforms except for the location of the Install Prompt.

2.1 Desktop

To install a Progressive Web Application onto a desktop computer:

1. Open a web browser such as Google Chrome or Microsoft Edge and go to the AEM website.
2. Navigate to the applicable product page and click the link to open the desired web tool.
3. Locate and click on the Install Prompt. On most browsers this will be in the web address bar.

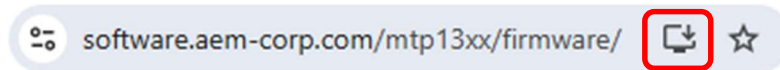


Figure 1: Install Prompt on Google Chrome

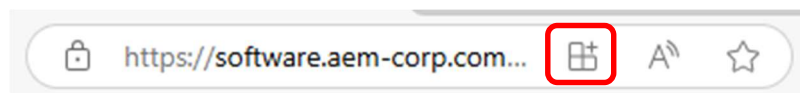


Figure 2: Install Prompt on Microsoft Edge

2.2 Mobile

To install a Progressive Web Application onto a mobile device:

1. Open a web browser such as Google Chrome or Apple Safari and go to the AEM website.
2. Navigate to the applicable product page and click the link to open the desired web tool.
3. Locate and click on the Install Prompt. On most mobile browsers the install prompt is found in the browser's menu.

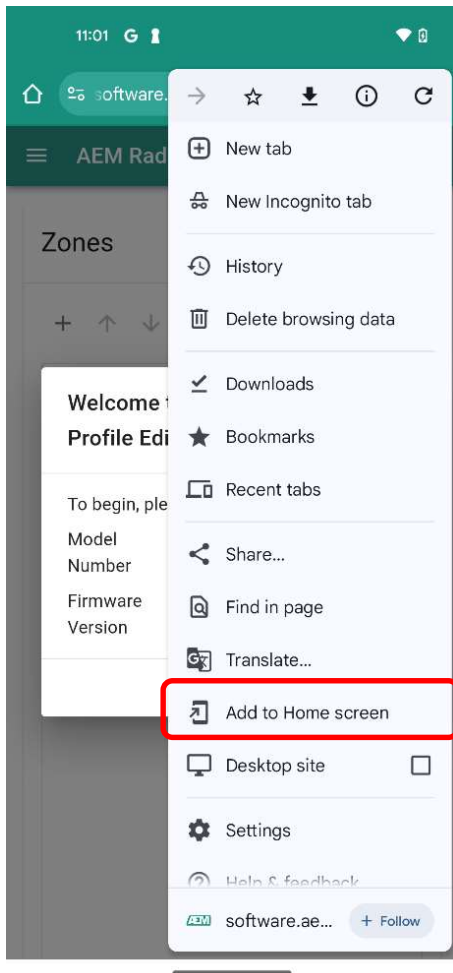


Figure 3: Install Prompt on Android (Chrome)

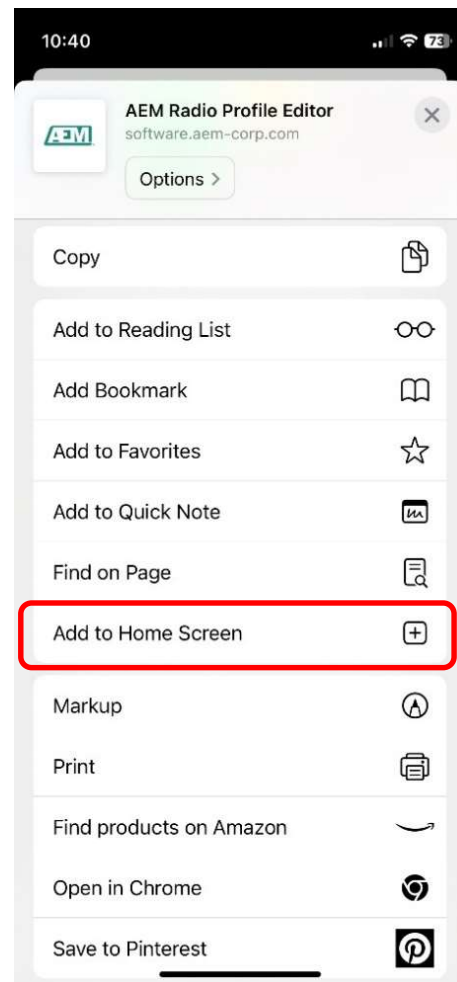


Figure 4: Install Prompt on iOS

Section 3.0 Offline Use

Progressive Web Applications work without an internet connection. Visiting the page once while online will save it for offline access. Offline access does not require installation and works in the web browser as well.

3.1 Verifying Offline Functionality

To verify offline functionality:

1. If using a wired connection, unplug the Ethernet cable from the device.
2. Disable Wi-Fi.
3. On mobile devices, turn on Airplane Mode to disable cellular data.
4. Use a web browser to navigate to the desired application.
5. Verify that the page is shown and functions normally.

Section 4.0 Updates

Progressive Web Applications are automatically delivered updates over the internet. When a new version is available, the application will prompt the user to update using a dialog on screen.

To ensure your applications stay up to date with the latest features and improvements, please periodically reconnect your device to the internet so it can receive updates.

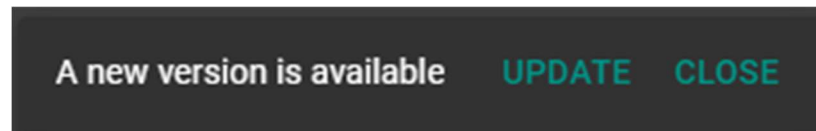


Figure 5: Update Prompt